




CHANGING THE JUG IN BOX (JIB)

1. Display shows “CHECK JIB” and yellow light comes on, replace the JIB.
2. Open right door and slide JIB from shelf. Pull the cap from top and pour any remaining oil into the vats equally.
3. Prepare new jug to accept the tube and insert tube into new jug. Then slide new jug into position under fryer.



FILLING THE JUG IN BOX (JIB) ON BULK SYSTEM FRYERS (RTI)

1. Display shows “CHECK JIB” and yellow light comes on, fill the JIB.
2. Open the door, that has the RTI switch.
3. Press & hold the ADD side of the RTI switch to add oil to the JIB

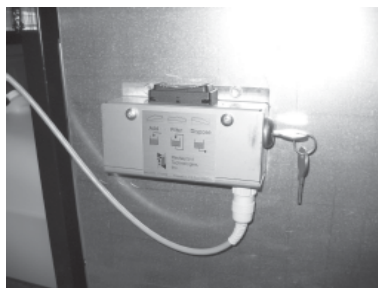

Any problems, refer to manual or contact Henny Penny Corp. 1-800-417-8405, or 937-456-8405.

NOTICE

These instructions are meant to be guidelines, not complete operating instructions. Read and understand the complete operator's manual supplied with each unit.