



MAINTENANCE FILTER

(End of Day Manual Filter)






 
 
 
 
 
 

 
1. **Put on protective gear:** Use all McDonald's approved safety equipment including, Apron, Face Shield and Gloves. Hot oil can cause severe burns.
2. Press and hold  (on either side) until display shows 1.AUTO FILTER.
3. Press and release  and display shows 2.MAINT FILTER. Press  button and display shows MAN FLTR and YES NO.
4. Press  and display shows DRAINING and the oil drains from the vat, **or** press **X** button for NO and controls return to normal operation. Gas units, continue to step 6.
5. **Electric units only.** Use the lift tool and lift the hinged element to clean the bottom of the vat. Use care not to damage high limit bulb. Figure 1.
6. Use the scouring tool, a nylon scouring pad, and a small amount of McD Fryer Cleanser to scrub the inside of the vat. Be careful not to damage the sensing probes.
7. Once the vat is clean and the display shows SCRUB COMPLETE?, and YES NO. Press  and the display shows WASH VAT?, and YES NO.
8. Lower the elements (**electric units only**) and press  and display shows WASHING (oil is pumped through the open drain to help wash crumbs out of the vat). Once the wash cycle is complete, display shows WASH AGAIN?, and YES NO.
9. Press  if another wash is needed, otherwise press **X** button for NO and the display shows RINSING (vat is filled with oil and drained to help rinse crumbs off the vat sides). When rinsing is complete, display shows RINSE AGAIN?, and YES NO.
10. Press  if another rinse is needed, otherwise press **X** button for NO. Display shows POLISH, and YES.
11. Press  button and the oil is "polished" and the display shows 5:00, followed by STOP POLISH. (Polishing is filtering the oil for an extended period to clean it.) If desired, press **X** button for STOP to stop the polishing early, otherwise the oil is polished for 5 minutes.
12. The display shows FILL VAT?, and YES NO. Press  and display shows FILLING and vat fills with oil.
13. Once full, display shows IS POT FILLED?, and YES NO. Press  and fryer returns to normal operation.



Figure 1

The filter pad or paper must be replaced daily!

Any problems, refer to manual or contact Henny Penny Corp. 1-800-417-8405, or 937-456-8405.

NOTICE

These instructions are meant to be guidelines, not complete operating instructions. Read and understand the complete operator's manual supplied with each unit.