Cleans the vat of crumbs and filters the oil thoroughly to prolong the life of the oil Why

Time required 5 minutes to prepare 10 minutes per vat to complete

During low volume hours. Time of day

Hazard icons Electricity 🕮 Hot Liquids/Steam 🕰 Hot Oil 🗷 Manual Handling Amoving Parts Sharp Objects/Surfaces

Tools and supplies



Heat-Resistance Gloves, filtering



Maintenance Filter & Fryer Vat Cleaning

Face shield



Apron. heat-resistant



Ecolab Hi-Temp Pad Holder & Pad



McFiltering Kit for built-in filtering Ecolab Hi-Temp system, sample



KAY® OSR Frver Detail Brush Cleanser



KAY® QSR Degreaser Solution



Clean, Sanitizer-soaked towels




Bucket, soiled towels



3-Compartment Sink

Procedure

Put on protective gear Use all McDonald's approved safety equipment, including apron, face shield and gloves.

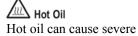



Check filter pan

burns

Make sure filter drain pan and pan cover are properly in place with filter lock (right) engaged and the filter pipe is tightly connected (left).



If the filter drain pan or pan cover are not properly in place, FILTER PAN MISSING shows in display.





- Press and hold FILTER button Make sure oil is hot to get the best results from filtering and then press and hold the FILTER button until 1.AUTO FILTER shows in display.
- Press DOWN button Press DOWN button and display shows 2.MAINT FILTER?



Press √ button

Press √ button and display shows MAN FILTER along with YES NO. Press √ button for YES to drop oil and display shows DRAINING. Press X for NO and controls return to normal operation.







6 Scrub inside vat
Attach the Pad to the HiTemp Pad Holder and
moisten with shortening.
Sprinkle KAY® QSR Fryer
Cleanser on the Pad. Scrub
the walls, corners and bottom
of the inside of the vat. Use
the Hi-Temp Detail Brush to
remove soil built up and
debris from burner tubes,
corners and bottom of vats
and other hard-to-reach areas.



Equipment Alert

Be careful not to damage the sensing probes or high limit.

Chemicals
KAY® QSR Fryer Cleanser

7 Scrub complete
Once the vat is clean and
display shows SCRUB
COMPLETE? press √ button
for YES. Display shows
WASH VAT? along with
YES NO.



8 Washing

Press √ button for YES and display shows WASHING. Oil is circulated through the vat.



9 Wash again

Once wash cycle is complete, display shows WASH AGAIN? along with YES NO. If vat is not yet clean, press √ for YES and step 9 is repeated.



10 Rinsing

If vat is clean, press **X** for NO and RINSING shows in display. The oil is pumped into the vat and rinses it.



11 Rinse again

Once completed, the display shows RINSE AGAIN?, along with YES NO. If vat is not yet clean, press √ for YES and step 11 is repeated.



12 Polish

If vat is clean, press X for NO and POLISH show in display, along with YES. Press √ button for YES and the oil is circulated through the filter system for 5 minutes.



13 Fill vat

Once the polish cycle is complete, FILL VAT shows in display, along with YES. Press √ button for YES and display shows FILLING and the vat fills with oil.



14 Back to normal operation

Once vat is full, display shows IS POT FILLED? along with YES NO. Press √ button for YES and fryer returns to normal operation.



15 Power switch on

Make sure the main power switch is in the ON position.



If the filter pad has not been changed, a reminder "CHANGE PAD" shows on the display. Press #1 button to cancel the message, but it reappears every 4 minutes until the filter pad has been changed.



continued ▶

16 Pull-out filter drain pan
Open the door, lift-up on the
drain pan stop and pull-out
the filter drain pan assembly,
using the handle on the drain
pan

Hot Surfaces
This pan could be hot! Use protective cloth or heat-resistant gloves, or severe



17 Remove filter drain pan cover Lift the pan cover from the drain pan and set aside.

burns could result.



18 Remove crumb basket
Lift the crumb basket from
the drain pan. Wipe the oil
and crumbs from the crumb
basket and discard. Set aside.




19 Remove filter pad retaining ring Remove the filter pad retaining ring and set aside.




20 Remove filter pad from pan Pull the filter pad from the pan and discard pad




21 Remove bottom screen
Pull the bottom screen from
pan and clean thoroughly with
soap and set aside.

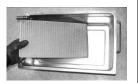

22 Clean filter drain pan cover, crumb basket, filter pad retaining ring, bottom screen and filter drain pan
Take all of the removable parts to the 3-compartment sink to wash in Sink
Detergent Solution and rinse thoroughly with hot water.
Allow to air dry before reassembling.

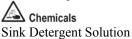

23 Reassemble

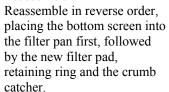



Tip

Be sure that the drain pan, bottom screen, crumb catcher, and the retaining ring are thoroughly dry before placing filter pad into pan as water will dissolve the filter pad.

24 Clean Exterior of Fryer
Wipe down the exterior of the
fryer with a clean, sanitizersoaked towel sprayed with
Degreaser Solution. Rinse
with a separate clean,
sanitizer-soaked towel.

